



1999 ISUZU

HOMBRE



GO AHEAD. WORK IT HARD.



Four-cylinder or V6, two doors or **the new 3-door**

Two-wheel drive or 4x4. Whatever.

Your Hombre only gets tired of waiting around.



Rugged underpinnings

Hombre's rigid box-section ladder-type frame teams up with a double-wishbone front suspension, a front stabilizer bar and a proven leaf-spring design in back to get you wherever there's work to be done.

Four-wheel ABS comes standard.

800 nrd



Handy tie-down loops

Whether your payload's big and top-heavy or light and flighty, you'll want to lash it down for security's sake. So there's a tie-down loop in all four corners of the box.



Push-button 4WD

When the going gets tough, you'll need all the muscle in your left index finger to engage 4-wheel drive. Then push the low-range button for a real test of strength.



Two-tier loading

Now you can carry chicken eggs and pig iron at the same time. Slip a pair of 2x6s into the sidewall pockets and lay a sheet of plywood across, and you've got two separate load areas. Put the rough, sharp and pointy cargo in the bottom and the fine, frilly and finish-grade materials on top.



Powerful engines





Standard convenience

Every Hombre has at least one cup holder. Spacecabs feature two accessory power outlets, stereo and XS power windows work for up to 20 minutes after you turn off the ignition, and an inside light that turns on until you open the door. Let an inside light on, and it'll turn itself off to save the battery.

All the comforts

Spacecab models can carry up to five passengers—three up front and two in the rear.³ Or flip up the rear jump seats to haul extra stuff inside the warm, dry cab. And if you choose the 3-door Hombre, the driver's side opens wider to make loading and unloading a lot easier.

Features & Options

Colors

Safety & Security

	4 Cyl. 2WD S Standard Cab	4 Cyl. 2WD XS Standard Cab	4 Cyl. 2WD XS Spacecab	V6 2WD XS Spacecab	V6 4WD S Standard Cab	V6 4WD XS Spacecab
Side-impact protection system with side-impact door beams	S	S	S	S	S	S
Driver and front passenger air bags* with on/off side deactivation switch	S	S	S	S	S	S
Driver and front outboard passenger seat belts and center lap belt	S	S	S	S	S	S
Seat belts for jump seat passengers	—	—	S	S	—	S
Side-impact door beams	S	S	S	S	S	S
4-wheel Anti-lock Brake System	S	S	S	S	S	S
Power door locks	—	—	—	P2	—	P2
Power window lock™ starter disabler	S	S	S	S	S	S
Power outside mirrors	S	S	S	S	S	S
Right rearview mirror	S	S	—	—	S	—
Right rearview mirror with map light	—	—	S	S	—	S
Speed variable intermittent windshield wipers with mist wipe	S	S	S	S	S	S

Exterior

	4 Cyl. 2WD S Standard Cab	4 Cyl. 2WD XS Standard Cab	4 Cyl. 2WD XS Spacecab	V6 2WD XS Spacecab	V6 4WD S Standard Cab	V6 4WD XS Spacecab
Over-cab cargo box with two-tier loading	S	S	S	S	S	S
Over-cab tie-downs in cargo bed	S	S	S	S	S	S
Gray rear bumper with step pad	O	O	S	S	O	S
Steel wheels with 5-spoke wheel covers	S	S	S	S	—	—
Aluminum-alloy 5-spoke wheels	—	—	O	O	—	—
Aluminum-alloy 12-hole wheels	—	—	—	—	S	S
In-bed spare tire carrier	S	S	S	S	S	S
Side glass	S	S	S	S	S	S
Full door glass, double-sealed doors	S	S	S	S	S	S
Large rear window	—	P1	P1	P1	—	P1
Chrome tailgate	S	S	S	S	S	S
Driver's side 3rd door	—	—	O	O	—	O

Interior & Seating

	4 Cyl. 2WD S Standard Cab	4 Cyl. 2WD XS Standard Cab	4 Cyl. 2WD XS Spacecab	V6 2WD XS Spacecab	V6 4WD S Standard Cab	V6 4WD XS Spacecab
Black cloth bench seat	S	—	—	—	S	—
Black cloth 60/40 split bench seat with folding center armrest	—	S	S	S	—	S
Gray vinyl rear jump seats†	—	—	S	S	—	S
Urethane™ protective treatment on front seating surfaces	S	S	S	S	S	S
Black floor carpeting	—	S	S	S	S	S
Black floor mats	—	P1	P1	P1	O	P1
Over-cab assist grip and coat hooks	S	S	S	S	S	S

Comfort & Convenience

	4 Cyl. 2WD S Standard Cab	4 Cyl. 2WD XS Standard Cab	4 Cyl. 2WD XS Spacecab	V6 2WD XS Spacecab	V6 4WD S Standard Cab	V6 4WD XS Spacecab
Climate conditioning with R134a refrigerant	O	O/P1	P1	P1	O	P1
Climate control with tap-up/down and cancel	—	—	—	P4	—	P4
Steering wheel	—	—	—	P4	—	P4
Power windows and door locks	—	—	—	P2	—	P2
Power heated outside mirrors	—	—	—	P2	—	P2
Power AM/FM stereo with digital clock	O	—	S	S	S	S
Power AM/FM stereo/cassette player with digital clock	O	P1	P1	P1	O	P1
Console with cup holder* (with automatic transmission)	S	S	S	—	S	S
Maple interior	S	S	S	S	S	S
Auxiliary power outlets	—	—	S	S	—	S
Interior lamp and exit lighting	S	S	S	S	S	S
Illuminated vanity mirrors	—	—	S	S	—	S
Instrument, trip odometer and gauges for coolant temperature, voltage, fuel level and oil pressure	S	S	S	S	S	S
Power windows	—	P1	P1	P1	S	S

Standard O Options — Not Available P Package Options

Olympic White



Meadow Green Metallic



Victory Red



Pewter Metallic



Indigo Blue Metallic



Black



Option Packages

	4 Cyl. 2WD S Standard Cab	4 Cyl. 2WD XS Standard Cab	4 Cyl. 2WD XS Spacecab	V6 2WD XS Spacecab	V6 4WD S Standard Cab	V6 4WD XS Spacecab
Interior Protection Package (interior vinyl, 200g for vinyl, 100g for urethane)	—	O	O	O	—	O
Interior Package	—	—	—	O	—	O



NO



SHORT

WARRANTIES

...e mighty confident in the ruggedness and reliability of the Isuzu Hombre. So we back
...th one of the longest basic warranties in its class—36 months/50,000 miles. You
...get an extended service contract with the Isuzu Protection Plan. You can even opt
...a prepaid maintenance program. Of course, reliability won't help if you run out of gas,
...a flat tire or lock yourself out. But we will, with 24-hour Roadside Assistance for the
...five years or 60,000 miles. (Ask any of our nearly 600 dealers for all the details.)
...e you buy a new Hombre, our owner 800 line can answer any questions about its care.
...a before you visit a dealer, you can learn more about Isuzu vehicles on your own by
...cking out our web site at www.isuzu.com. (You'll also find out where to buy them,

www.isuzu.com

ISUZU

Go farther.

1 800 705 0770